



Note: The interface of printer showed in picture may have some differences from the model your purchased. As for the actual interface, please refer to the product specifications




Print media loading

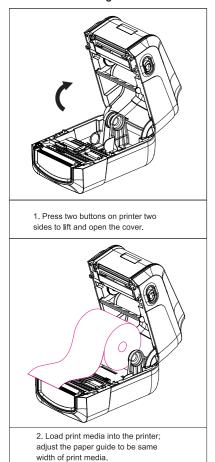

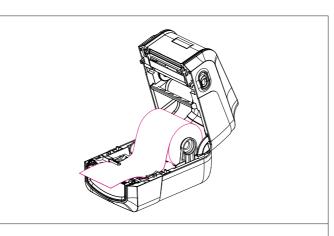

3.Pull out the print media till it pass gap sensor and cutter or peeler (cutter and peeler are optional), complete media loading

Ribbon loading

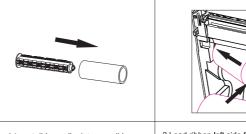


1.Insert ribbon roller into new ribbon.

2.Load ribbon left side first and then right side, fix it well.

3.Insert ribbon roller into the empty roll for ribbon collecting after printed	4.Open the front cover	5.Load the empty roll left s first, then right side.
6.Pull out ribbon and stick into the empty roll. Make sure ribbon is flat and smooth when touch print head.	7.Close the front cover.	8.Carefully close top cover

Platen roller

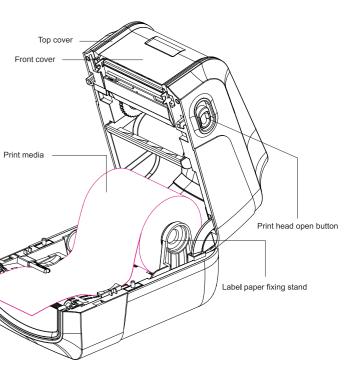

*If you need more information about the product, please refer to the User's Manual in CD. *The printer specification, accessory, spare parts and program are subject to change

